
0F3MR300D110000 / FKW-M020 KAWASAKI KX450F

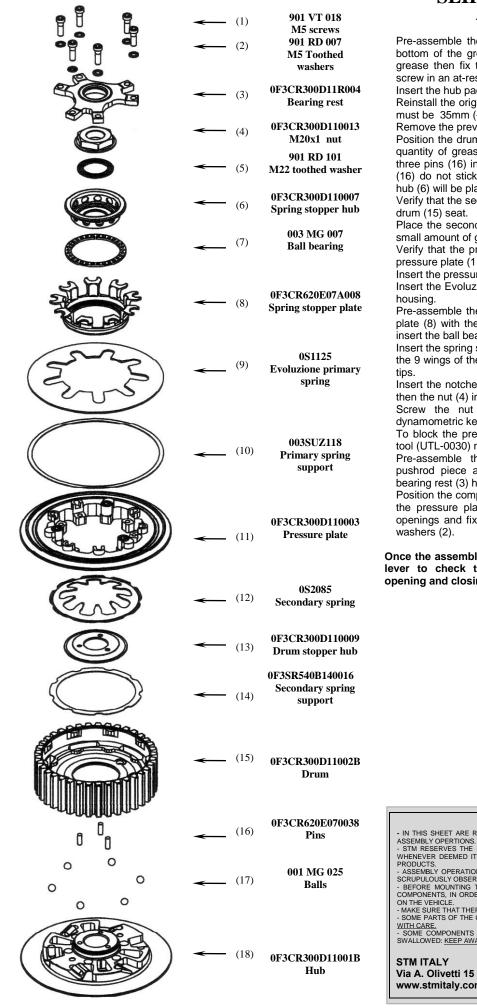

SLIPPER CLUTCH KIT IDI V INSTRUCTIONS

| 901 VT 018 | ASSEMBLY INSTRUCTIONS |
|-------------------------------------|--|
| M5 screws | Dra assemble the hub neak: place the 6 steel holls (17) at the |
| 901 RD 007 M5 Toothed | Pre-assemble the hub pack: place the 6 steel balls (17) at the bottom of the grooves of the hub (18) using a small amount of |
| washers | grease then fix the drum (15) onto the hub (18) with an M6x1 |
| 0F3CR300D11R004 | screw in an at-rest position. |
| Bearing rest | Insert the hub pack onto the main shaft. Reinstall the original clutch plates. The total thickness of the pack |
| Dearing rest | must be 35mm (+0,3mm -0mm). |
| 0F3CR300D110013 | Remove the previously mounted screw. |
| M20x1 nut | Position the drum stopper hub (13) on the hub (18) with a small |
| 901 RD 101 | quantity of grease taking care to align the three holes with the three pins (16) inserted in the hub (18). Then check that the pins |
| M22 toothed washer | (16) do not stick out from the surface where the spring stopper |
| 0F3CR300D110007 | hub (6) will be placed. |
| Spring stopper hub | Verify that the secondary spring support (14) is well inserted in the |
| | drum (15) seat. Place the secondary spring (12) in the drum (15) housing with a |
| 003 MG 007 | small amount of grease. |
| Ball bearing | Verify that the primary spring support (10) is well inserted in the |
| | pressure plate (11) seat. Insert the pressure plate (11) in the drum (15). |
| | Insert the Evoluzione primary spring (9) in the pressure plate (11) |
| 0F3CR620E07A008 | housing. |
| Spring stopper plate | Pre-assemble the spring stopper group: keep the spring stopper |
| | plate (8) with the groove for the bearing facing up as illustrated, insert the ball bearing (7) and then the spring stopper hub (6). |
| | Insert the spring stopper group into the pressure plate (11) making |
| 0S1125 Evoluzione primary | the 9 wings of the spring stopper plate (8) overlap the 9 spring (9) |
| spring | tips. Insert the notched washer (5) with the convex part facing up and |
| • 0 | then the nut (4) in the spring stopper hub (6). |
| | Screw the nut (4) onto the drive shaft, locking with the |
| | dynamometric key to the torque suggested by the manufacturer. To block the pressure plate (11) we suggest to use the specific |
| 003SUZ118 | tool (UTL-0030) not supplied with the clutch. |
| Primary spring | Pre-assemble the complete bearing rest: mount the clutch |
| support | pushrod piece and the bearing of the original clutch into the |
| | bearing rest (3) housing. Position the complete bearing rest (3) into the relevant opening of |
| | the pressure plate (11) taking care to correctly place it in the |
| 0F3CR300D110003 | openings and fix it with the six screws (1) and with the toothed |
| Pressure plate | washers (2). |
| | Once the assembly is completed, repeatedly operate the clutch |
| | lever to check that pressure plate correctly performs the |
| 082085 | opening and closing movements, then mount the clutch guard. |
| Secondary spring | |
| | |
| 0F3CR300D110009 | |
| Drum stopper hub | |
| 0E2CD = 40D1 4001 C | |
| 0F3SR540B140016 Secondary spring | |
| support | |
| | |
| | |
| | |
| 0F3CR300D11002B | |
| Drum | |
| | |
| AE2CD (34E454429 | GENERAL SAFETY REGULATIONS |
| 0F3CR620E070038 Pins | - IN THIS SHEET ARE REPORTED THE DIRECTIONS TO PERFORM CORRECTLY THE CLUTCH |
| | ASSEMBLY OPERTIONS. - STM RESERVES THE RIGHT, WITHOUT NOTICE, TO INTRODUCE ANY TECHNICAL CHANGE |
| 004 5 5 2 05 - | WHENEVER DEEMED IT TO BE NECESSARY TO IMPROVE FUNCTION AND QUALITY OF THE PRODUCTS. |
| 001 MG 025 Balls | - ASSEMBLY OPERATIONS MUST BE PERFORMED BY A SKILLED TECHNICIAN AND MUST BE SCRUPULOUSLY OBSERVED. |
| Dalls | - BEFORE MOUNTING THE CLUTCH MAKE A COMPLETE INSPECTION OF THE MOTORBIKE COMPONENTS, IN ORDER TO VERIFY THE POSSIBLE PRESENCE OF FAULTS OR ANOMALIES |
| | ON THE VEHICLE. - MAKE SURE THAT THERE ARE NO MISSING/DAMAGED PARTS IN THE CLUTCH KIT. SOME DATES OF THE CLUTCH AND ITS COMPONENTE CAN HAVE SHARD SUBFACE. HANDLE |
| | - SOME PARTS OF THE CLUTCH AND ITS COMPONENTS CAN HAVE SHARP SURFACE: <u>HANDLE</u> <u>WITH CARE</u> . - SOME COMPONENTS OF THE CLUTCH, BECAUSE OF THEIR SMALL DIMENSIONS CAN BE |
| | - SOME COMPONENTS OF THE CLUTCH, BECAUSE OF THEIR SMALL DIMENSIONS CAN BE SWALLOWED: KEEP AWAY FROM CHILDREN. |
| 0F3CR300D11001B | STM ITALY |
| Hub | SIMITALI |
| | Via A. Olivetti 15 - 10020 - Riva presso Chieri (TO) |
| | 00017 |